

= JOB ORDER DURING DOWNTIME PERIOD =
(MV KINSEL JANE - 1)

JOB ORDER FOR MAIN ENGINE:

1. Pull out all cylinder head \nearrow RESET all EXHAUST VALVE, INTAKE VALVE, \nearrow AIR STARTING VALVE.
2. Pull out all piston \nearrow REMOVE PISTON CROWN FOR RECLEANING THE L-O LUBRICATION PASSAGE.
3. Pull out all FUEL INJECTOR VALVE \nearrow REPLACE BRAND NEW NOZZLE TIP.
4. Pull out TURBO CHARGER ROTOR FOR CLEANING.
5. Pull out SCAVENGER AIR COOLER \nearrow RECYCLE W/ CHEMICALS.
6. REWELD CRACK TURBO CHARGER CASING OUTER SIDE.
7. FABRICATE BURNOUT EXPANSION ELEMENT (FLEXIBLE PIPE).
8. FABRICATE 1 SET OF TACHOMETER CABLE WIRE.
9. REPLACE MAIN LINE AIR DISTRIBUTOR STARTING LINE.
10. CHANGE OIL.

JOB ORDER FOR AUX. ENGINE 1 & 2

1. Pull out CYLINDER HEAD \nearrow RESET all INTAKE & EXHAUST VALVES \nearrow AIR STARTING VALVES. OF AUX. # 1 & 2.
2. Pull out all PISTON \nearrow REPLACE BRAND NEW PISTON RINGS \nearrow CHECK BEARING CLEARANCE \nearrow REPLACE IF NECESSARY OF AUX. # 1 & 2.
3. REPLACE BRAND NEW NOZZLE TIP OF ALL FUEL INJECTOR OF AUX. # 1 & 2.
4. CHECK EXPANSION ELEMENT OF EXHAUST MANIFOLD (FLEXIBLE PIPE),
REWELD IF THERE IS CRACK. BOTH AUX. # 1 & 2.

= OVER =

5. REPLACE EXHAUST MANIFOLD W/ BRAND NEW SPARE ON BOARD OF AUX. # 1 & 2 ONLY.
6. CLEAN ALL L.O COOLER S-W SIDE OF AUX. # 1 & 2.
7. CHANGE OIL.

JOB ORDER FOR OTHER AUX. MACHINES

1. CLEAN MAIN L.O COOLER S-W SIDE \checkmark REPLACE ZINC ANODE IF NECESSARY.
2. RECONDITION AIRCON COMPRESSOR PUMP \checkmark CHECK IMPELLER.
3. RESET AIR SEA CHEST SUCTION VALVE \checkmark STABILIZED 4 PORT SIDE.
4. REPAIR DEGENERATED TAILSHAFT PUMPER BEARING S-W COOLING PIPELINE.
5. CLEAN AIR CON CONDENSER S-W COOLING.
6. REPLACE AIRCON REGULATOR \checkmark THERMOSTAT SWITCH OF AIR CON.
7. CLEAN GENERATOR SET ARMATURE \checkmark ROTOR OF AUX. ENG. # 1 & 2.

PREPARED BY :

A. ANOJA

2/E MV KOSTAL JAVE 1